


# Section 8 COMMERCIAL SADDLE THRESHOLDS


Standard Sizes (Product is cut oversize to allow "cutting in"): 30", 32", 36", 42", 48" (**cut 3/8" over**); 60", 64", 72" (**cut 1" over**).  
**Other lengths are available** (Extra cost over 73").

**Routed thresholds (page 40) and specified lengths are cut exact.** Center holes are counter-sunk.  
**#10 phillips flathead screws of appropriate length are included.**  
 Nominal min. wall thickness 1/8"  
 Tabs avail. for 1/2" saddles. (page 40)

Special anchors may be required on concrete slab construction & are available at extra cost, see page 54.

 Barrier free design meets ADA requirements.

**1502** A, B  
 10 x 1" phillips flathead screws are included.

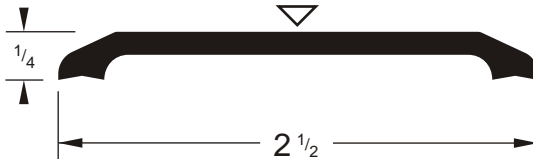


**1503** A, B  
 10 x 1" phillips flathead screws are included.




## 1/2" COMMERCIAL SADDLE THRESHOLDS


**1504** A, B  
 10 x 1-1/2" phillips flathead screws are included 1504-1507.

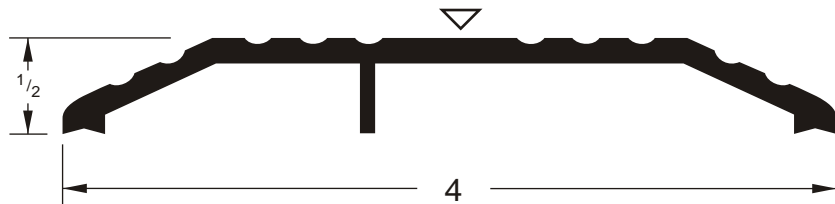


**1505** A, B

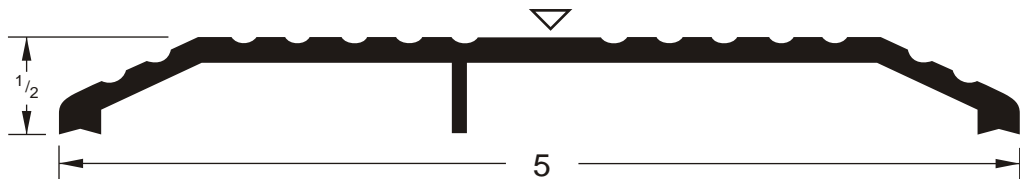

**1506** A, B

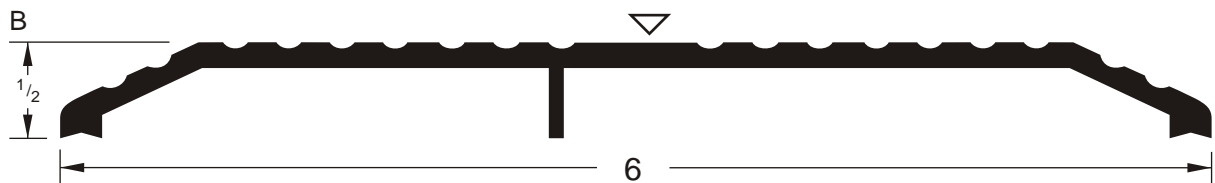

**1507** A, B

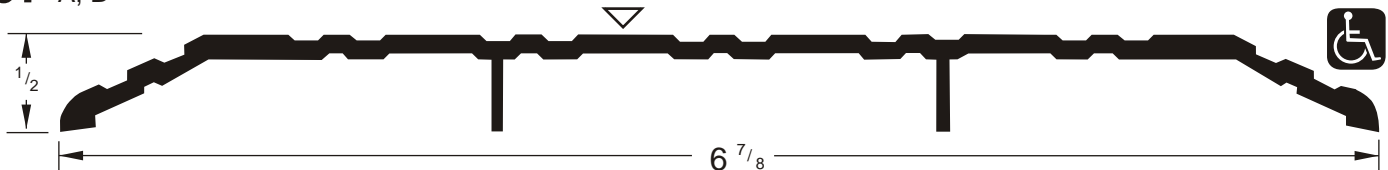

▽ Indicates location of standard fastener hole.

## HEAVY DUTY COMMERCIAL SADDLE THRESHOLDS

10 x 1-1/2" phillips flathead screws are included 1516-1520.

**1516** A, B




**1517** A, B




**1518** A, B



**1520** A, B

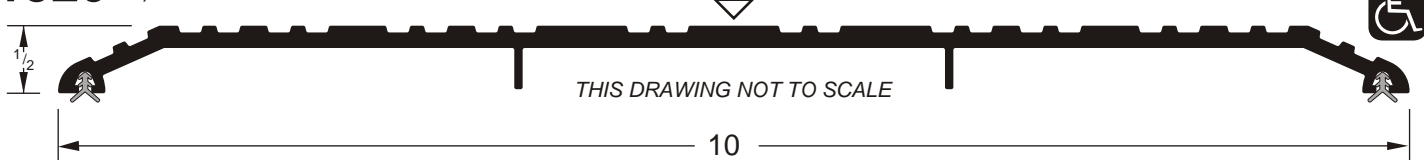

**ROUT FOR METAL/MORTISED FRAMES**  
 (RMF) A milling operation to re-move aluminum, enabling the threshold to be "dropped" into place.

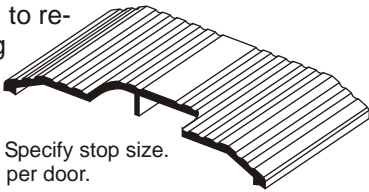

**Order:** Exact length required. Specify stop size.  
**Holes:** Three (3) center holes per door.

**TABS**  
 Tabs can be attached to 1/2" commercial saddle thresholds to facilitate the connection between thresholds and wood frame.




**Order:** Exact length required.  
**Holes:** No center hole.


▽ Indicates location of standard fastener hole.

**SADDLE THRESHOLDS WITH SCREW BOSS**

**1519** B

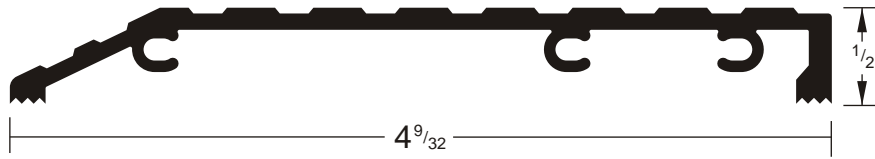


**1529** B

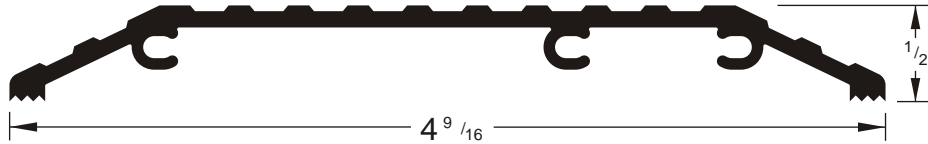


**1/4" COMMERCIAL SADDLE THRESHOLDS**

10 x 1" phillips flathead screws are included 1544-1547.

**1544** A, B

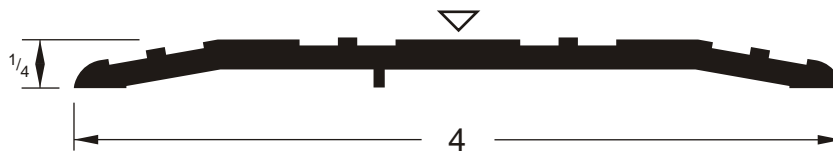

**1545** A, B

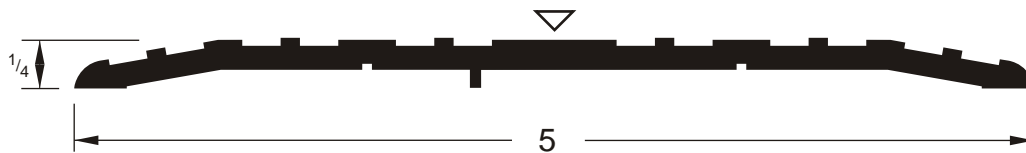

**1546** A, B



**1547** A, B




▽ Indicates location of standard fastener hole.


**THERMAL BREAK SADDLE THRESHOLDS**

10 x 1-1/2" phillips flathead screws are included 1512-1515.


**1512** A, B

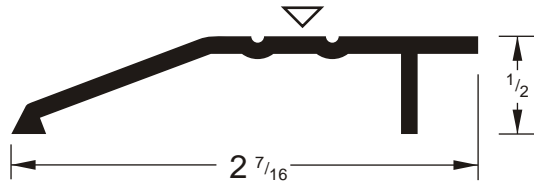

**1514** A, B

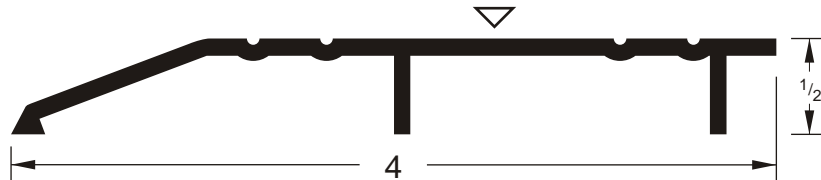


**1515** A, B

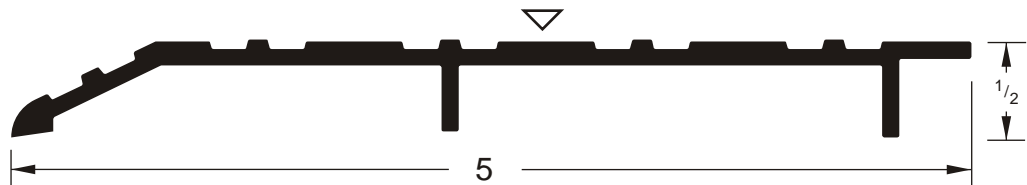

**NOTE:** A popular application of the "Half-Saddle" is to meet interior tile flooring.

**1511** P


Black rigid vinyl thermal break connector to join saddles.

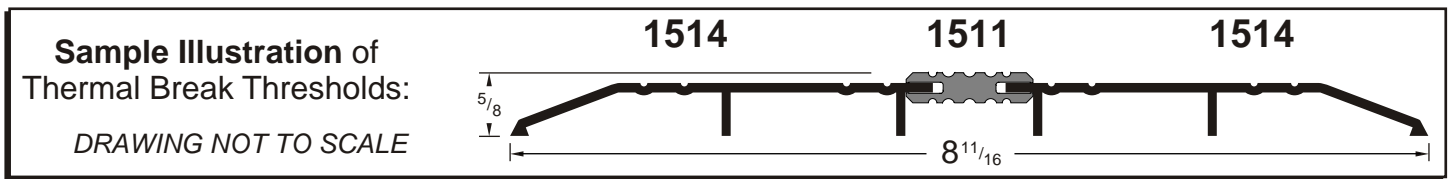

**1522** A, B

PANIC exit bumper threshold. Handicapped barrier-free design.


10 x 1-1/4" phillips flathead screws are included.

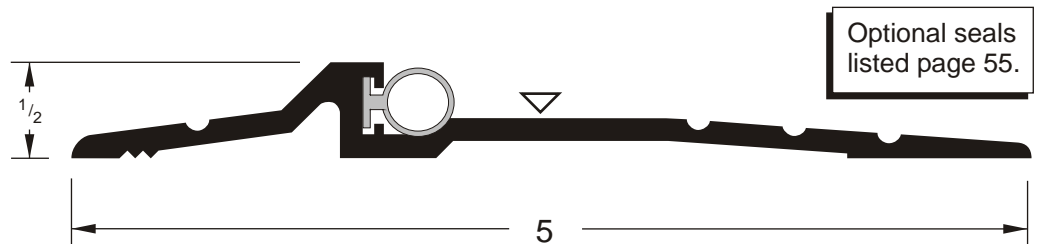

Optional seals listed page 55.


**1510**

A, B  
10 x 1-1/4"  
Phillips flathead  
screws are  
included.

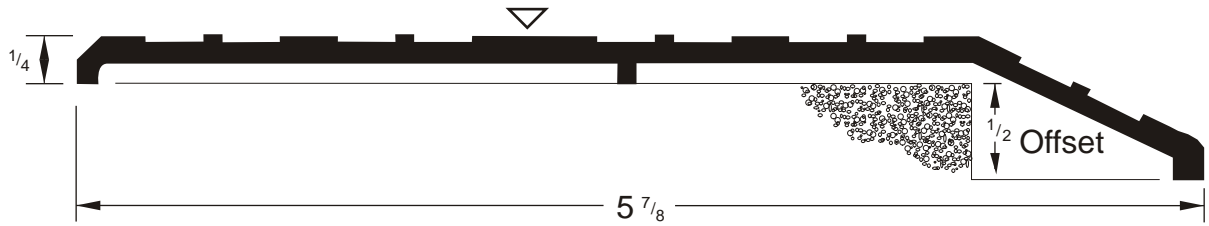



**1550**

A, B  
10 x 1-1/4"  
Phillips flathead  
screws are  
included.

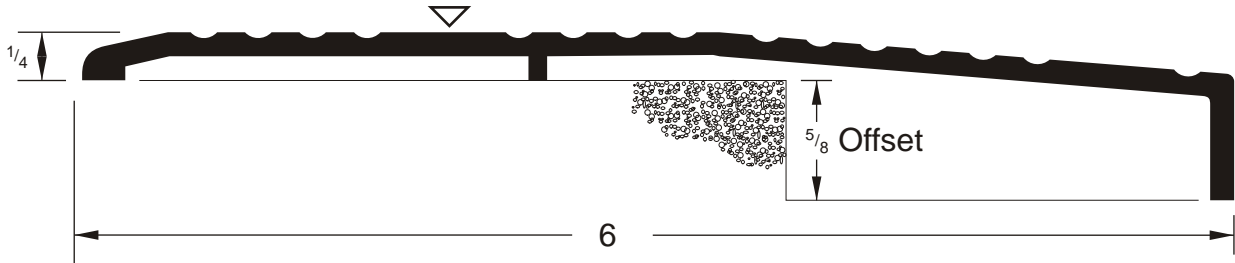


**1552**

A, B  
10 x 1-1/4"  
Phillips flathead  
screws are  
included.

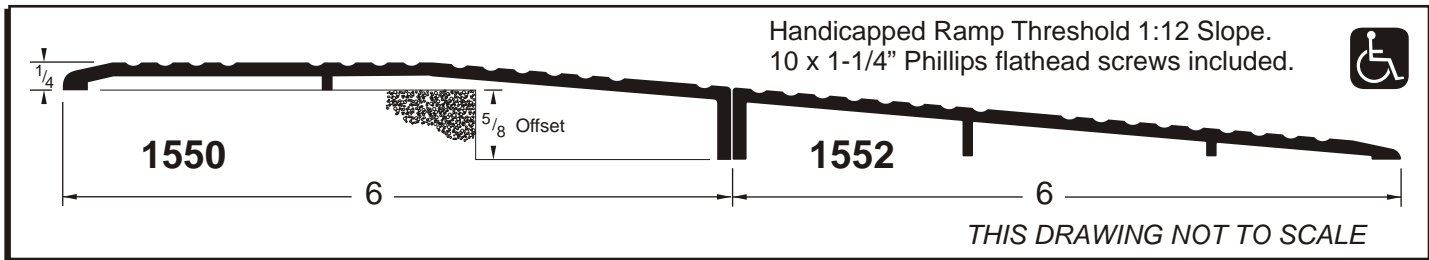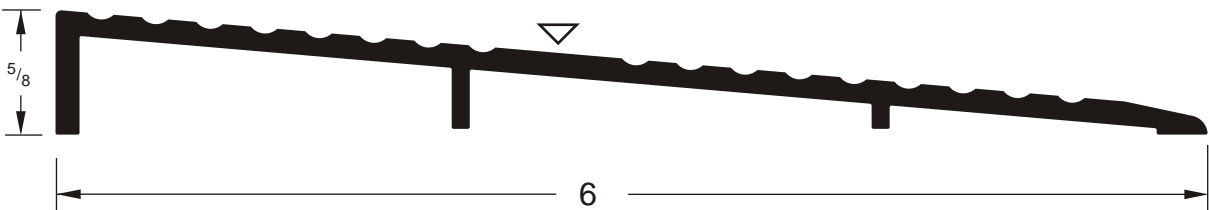

**HALF SADDLE**

**1564** A, B

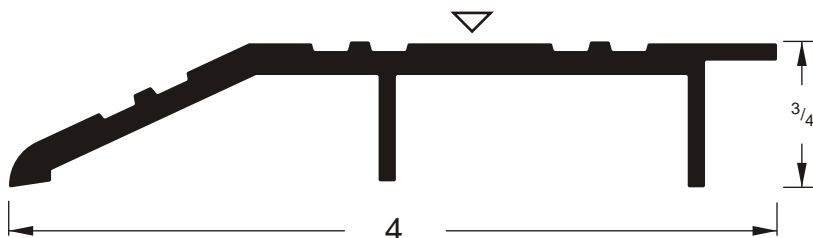

▽ Indicates location of standard fastener hole.

PRODUCTS ARE SHOWN ACTUAL SIZE  
(EXCEPT AS NOTED)

COMBO ALUMINUM PRODUCTS, EL CAJON, CA  
Tel (619) 447-9200 (800) 457-7500 Fax (619) 442-4558